Hydra Jet Showers

Installation instruction

ACS CE UPC WaterMark
Australian NZ credited

Always ask your installer to check the product before installation, make sure the shower working properly.

120mm
[4,72"]

75mm
[2,95"]

models:

Waikiki
Miami
Sorrento
Noosa
Bondi
Esperance

2100mm
[82,68"]

1200mm
[47,24"]

900mm
[35,43"]

200mm
[7,87"]

200mm
[7,87"]
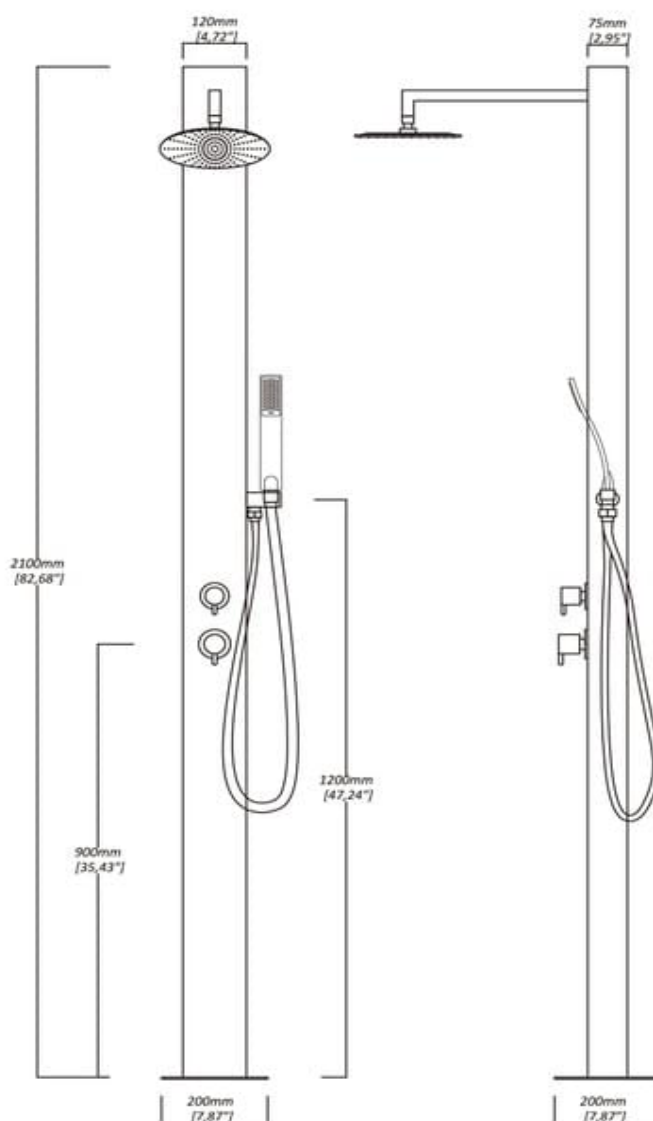
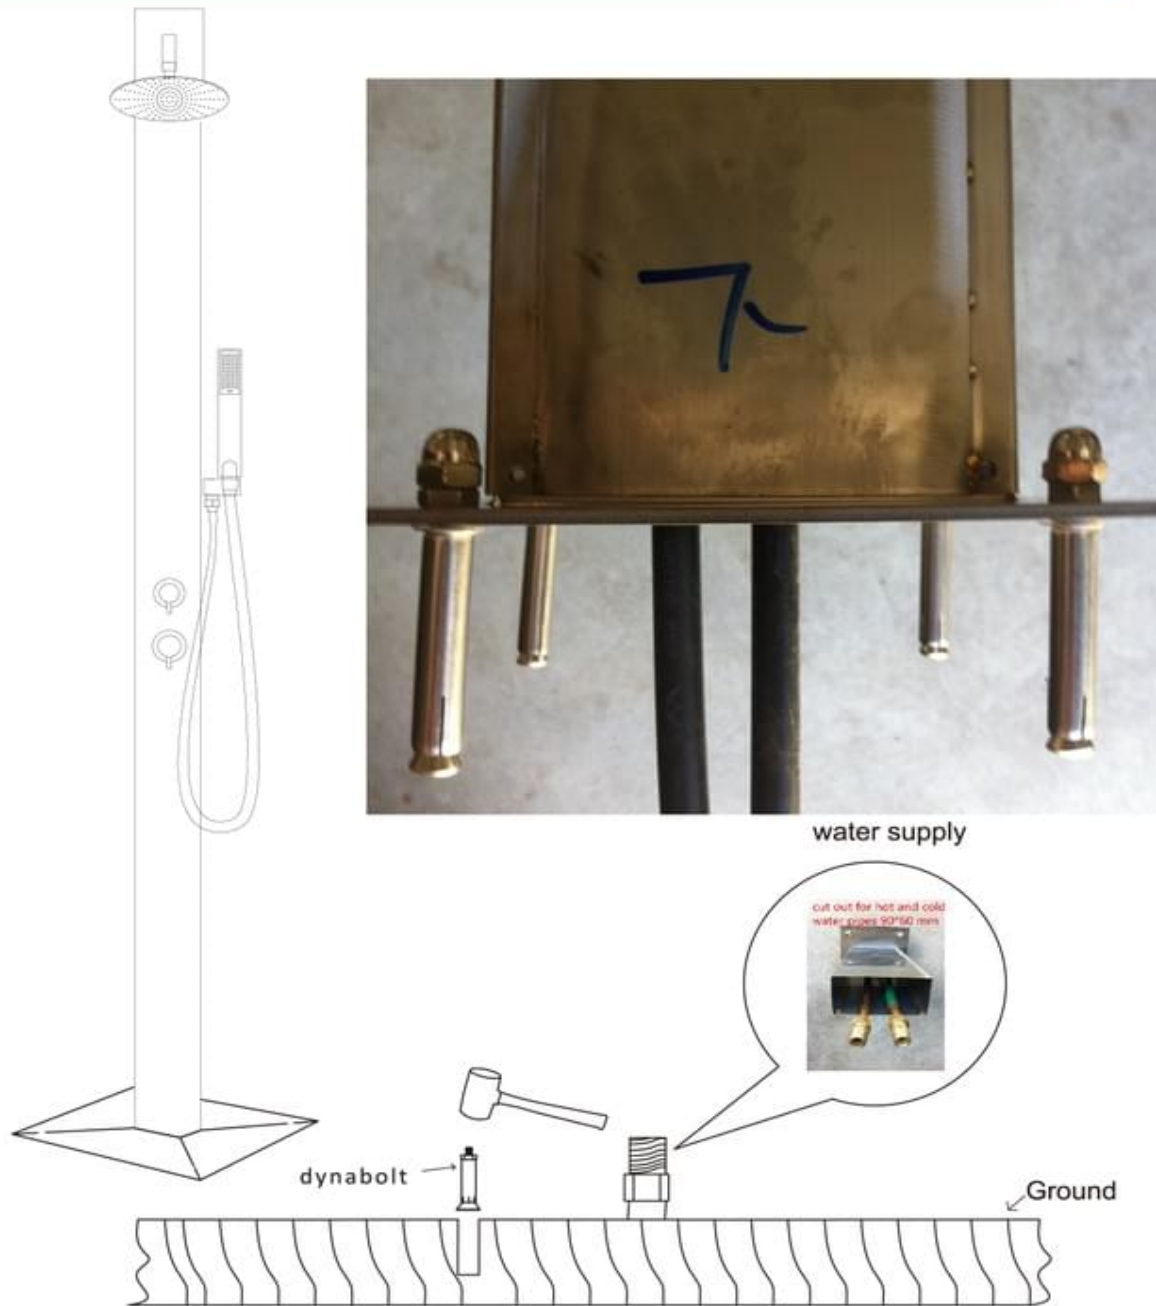**Before Installation - LICENSED PLUMBERS REQUIRED**
Check the product before installation
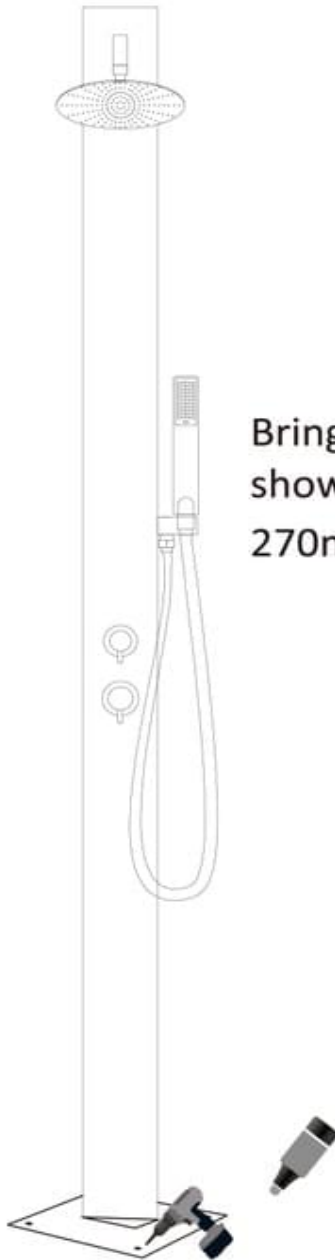
Bring one hot and cold water line to where the shower is being installed, 1/2" inch water pipe, 270mm above the ground; Mark and drill holes

1. Drill holes and clean the dust out of the hole

water supply

cut out for hot and cold
water pipes 90*60 mm

dynabolt →

Ground

Hammer the dynabolts into the hole in the concrete

2.Bring one hot and cold water line to where the shower is being installed, 270mm above the ground

1/2" flexible easy hookers

Ground
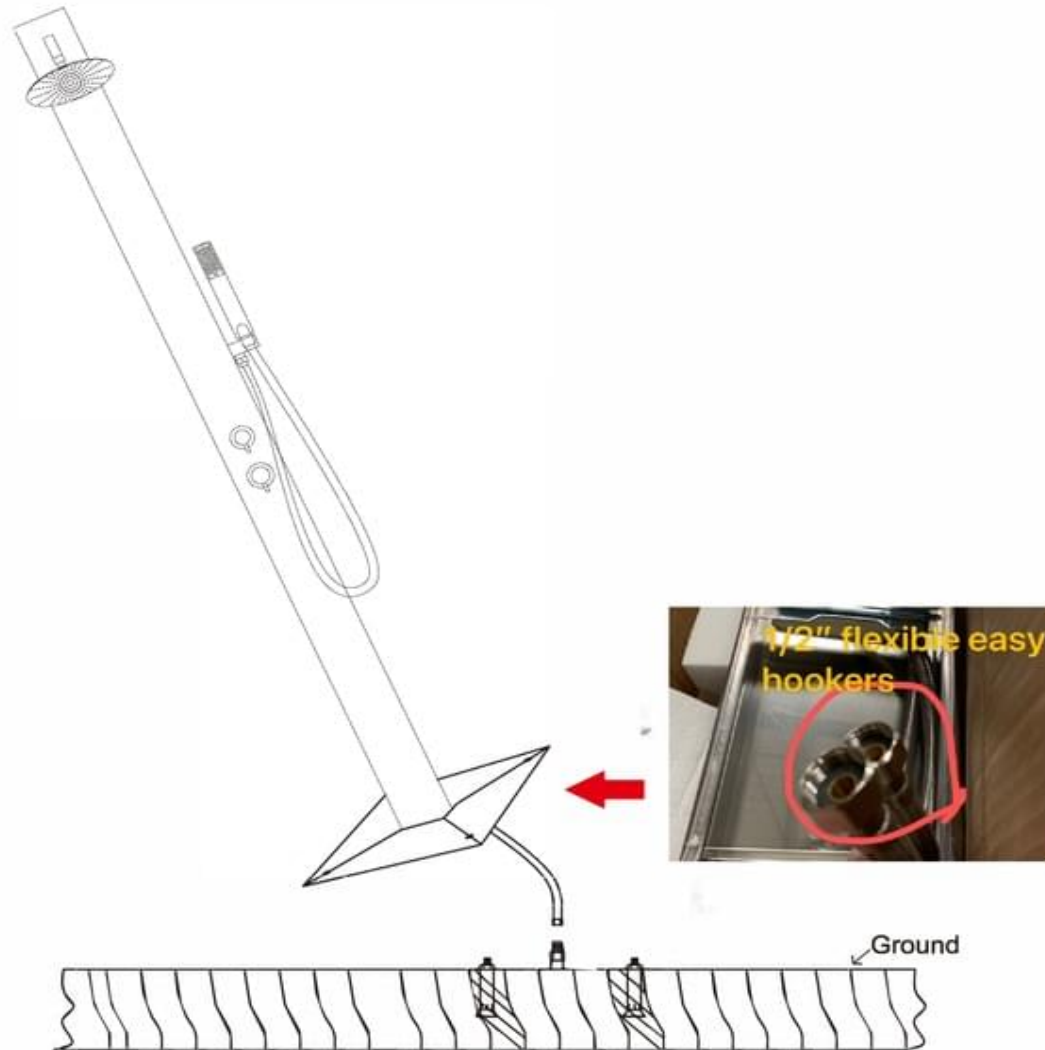
connect installed 1/2" flex water connectors to water service, level the base plate properly and ensure the placement is properly

3. Connect pre-installed easy hookers hot and cold water pipes to your supply

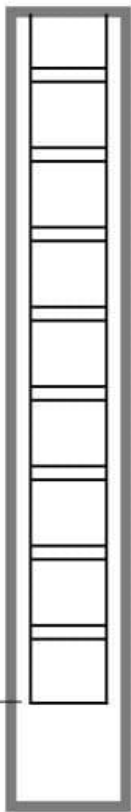Tighten the nut with a torque wrench, covered by screw caps
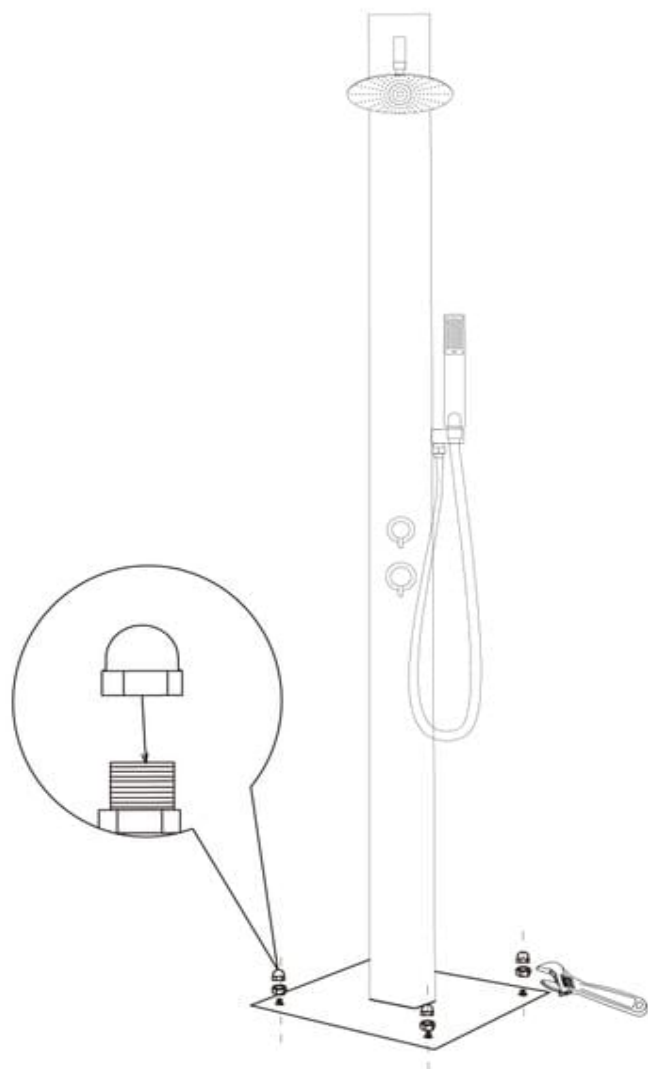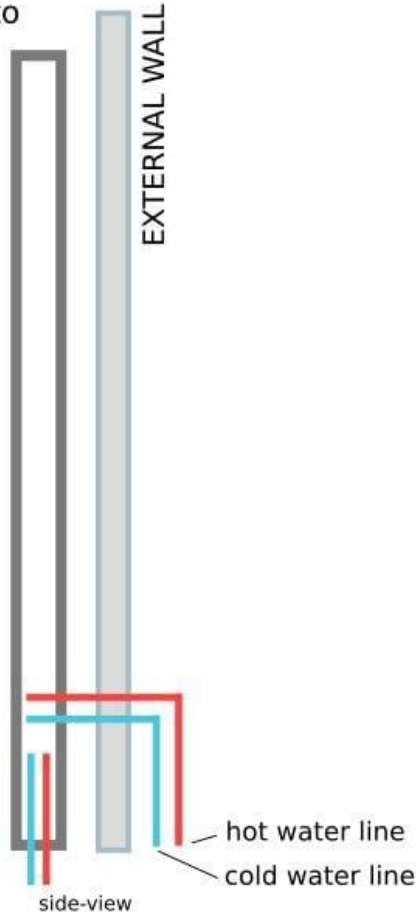
4. Tighten the nut with a torque wrench, covered by screw caps

HydraJet Showers - Wall Mounted Specs

hydra

models:
**Waikiki
Miami
Sorrento**

EXTERNAL WALL

8 x cross-bars

for wall brackets
spaced 260mm

back plate

spaced 270mm
above the base

hot water line

cold water line

rear-view

side-view

models:
Bondi

Anti-vandal
fixing at
top cross-bar

DynaBolts
into top bracket

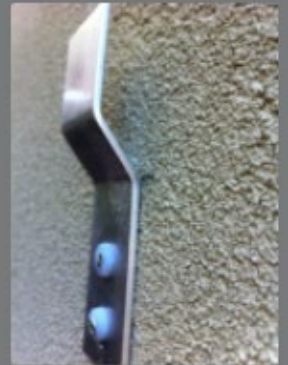Bondi :
COLD WATER ONLY

cold water
"easy-hooks"
factory installed

wall bracket

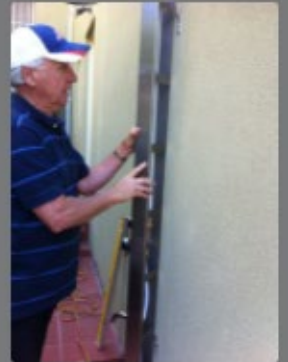cold water line

more info?

contact Leo Stewart
0434 593 651

STEP ONE

mark and drill your pilot holes, install one support bracket at the top of the shower and the other support in the middle

STEP TWO

remove the rear panel and free standing base plate from the shower, attached supplied 2* mounting brackets to the wall,they will support the 2*rear support bars at the rear of shower

STEP THREE

connect the 1100mm easy hookers hot and cold water pipes to your water supply, mount the shower to the wall, level the shower

FINIAL STEP

If needed run a band of silicon down the inside of the back edges, but this is not necessary